


## Instant Mold Test Kit

### Directions for Use



Remove the swab from the tube.

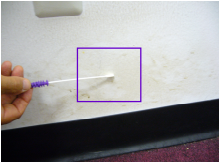

Swab the test surface. Be sure to collect enough sample material by covering an area of at least 16 square inches. (4 inches horizontal and vertical)



Insert the swab back into the tube, firmly press down on the handle until the swab snaps into the solution chamber. Shake rapidly for at least 5 seconds. Wait up to 10 minutes for results. **IF IT'S GREEN IT'S CLEAN!**

Because this test looks for the presence of specific proteins and carbohydrates it is subject to false negative and positive results. Certain substances such as food, blood and untreated wood may yield a false positive result.

***Warning: In the event your mold test turns purple it is highly advisable to have the mold analyzed at IMS Laboratory to verify that the substance is mold and to determine the type of mold(s) present.*** This information is useful in determining allergy treatment and/or cleanup processes.

If you have a positive test result and you wish to have the mold analyzed by IMS Laboratory:

1. Locate the Test Strip included with the Instant Mold Test Kit.
2. Remove Test Strip from liner
3. Position the sticky side of the sample window over the area you previously swabbed and press lightly. (Do not rub back and forth). There should be a light deposit of material in square window on the tape.



4. Replace the Test Strip on liner.
5. Label the adhesive tape with sample information.
6. Complete the "Information Form" and place the Test Strip(s), the information form, and your check, money order or credit card information in the postage paid return envelope provided.

After our receipt of your sample, it will take approximately 2 weeks to receive your laboratory results via email. You also have the option of receiving your results via FAX or U.S. Mail for an additional fee. **If you need your results faster, we offer both EXPRESS service (4-7 days) and RUSH service (1-2 days) for an additional charge.**

**In the unlikely event of contact with test reagents please note the following:** In case of contact with eyes, immediately flush eyes with plenty of water for at least 15 min. In case of contact with skin, flush immediately with plenty of water. If irritation persists get medical attention. If swallowed, wash out mouth with water and seek medical advice.